 
 


Power Range Guide

 
Übersicht der Leistungseinstellungen • Guía de escala de fuerza • Guide des réglages de puissance
 Guida alle impostazioni di frequenza • Guia da Faixa de Alimentação • パワーレンジガイド




4 - MAX




1 - 3



2 - MAX



 


1 - 4

 




1 - 4





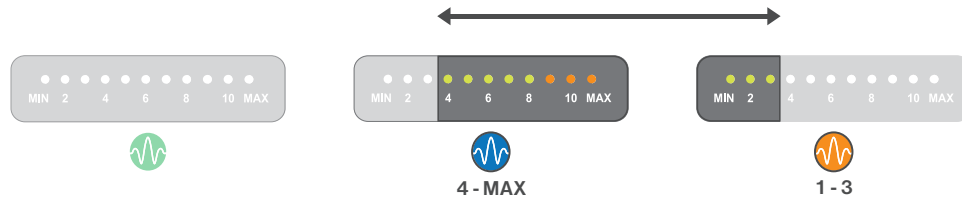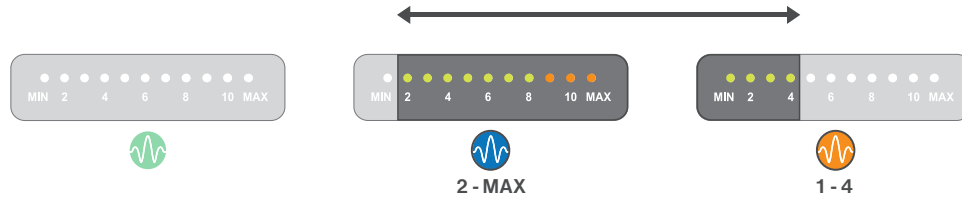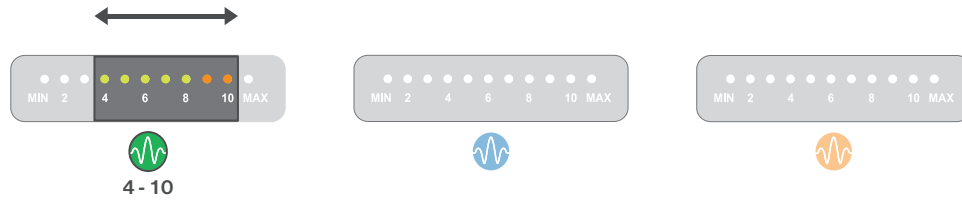

Power Range Guide

Übersicht der Leistungseinstellungen • Guía de escala de fuerza • Guide des réglages de puissance
 Guida alle impostazioni di frequenza • Guia da Faixa de Alimentação • パワーレンジガイド

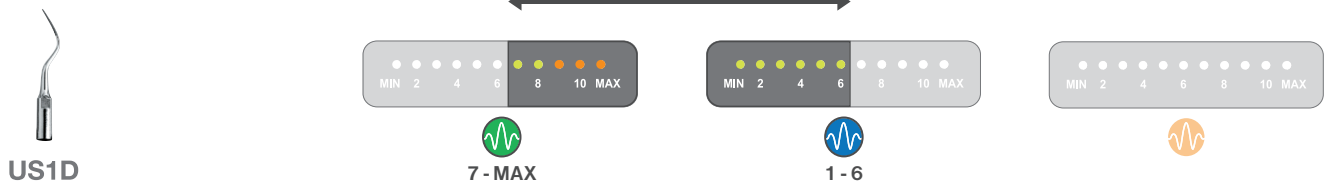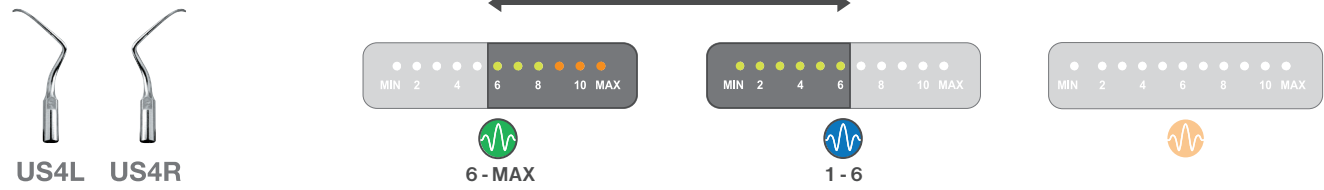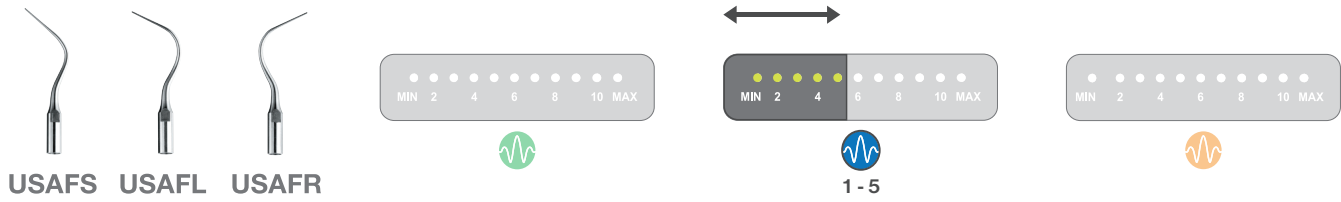

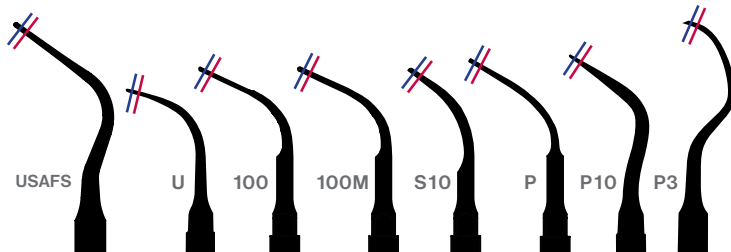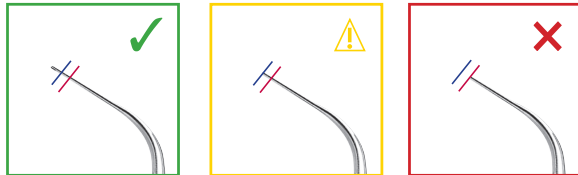

Hu-Friedy Mfg. Co., LLC
3232 N. Rockwell St.
Chicago, IL 60618-5935

1-800-Hu-Friedy
Hu-Friedy.com

OM-ZZ121E 001

HF-470/0111